

MITIGATION

Always rely on the AIP and/or the FAP indications to locate the origin of the call.


AREA CALL PANEL (ACP)

The Area Call Panels (ACPs) are located in the entrance areas and over the aisles. Some of them are integrated in the EXIT sign housing.

The ACPs provide a visual indication related to system information (e.g. Lavatory Smoke Location, PAX Calls, EVAC signaling, interphone calls).

The ACP has four or five fields that are controlled separately. Each field contains colored LEDs. When the lights are on they can be seen from the front and the back of the ACP. The fields are individually activated to indicate the different system information. The lights come on continuously or flashing.

Typical Area Call Panel (ACP) with 5 Colored LEDs

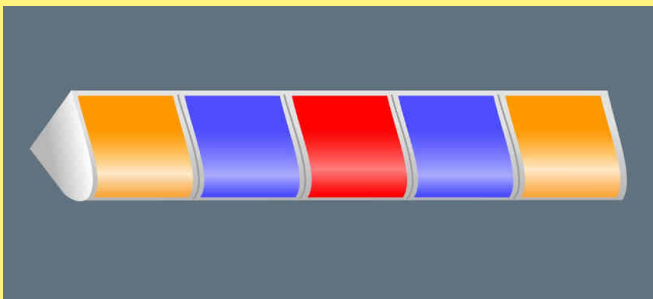

Note: The different indications (BLUE, AMBER, PINK) are only visible when they are on.

The following table shows the types of information visible on the ACP:

System Information	Color on ACP	Light Modus
PAX Call	Blue	Steady
PAX Call (from Lavatory)	Amber	Steady
LAV Smoke	Amber	Flashing
Attendant Call	Pink	Steady
Purser Call (from Cockpit)	Pink	Flashing
Purser Call (from Cabin)	Pink	Steady
EMER Call	Pink	Flashing